





1. Step: Remove the original plug at the gas pedal.

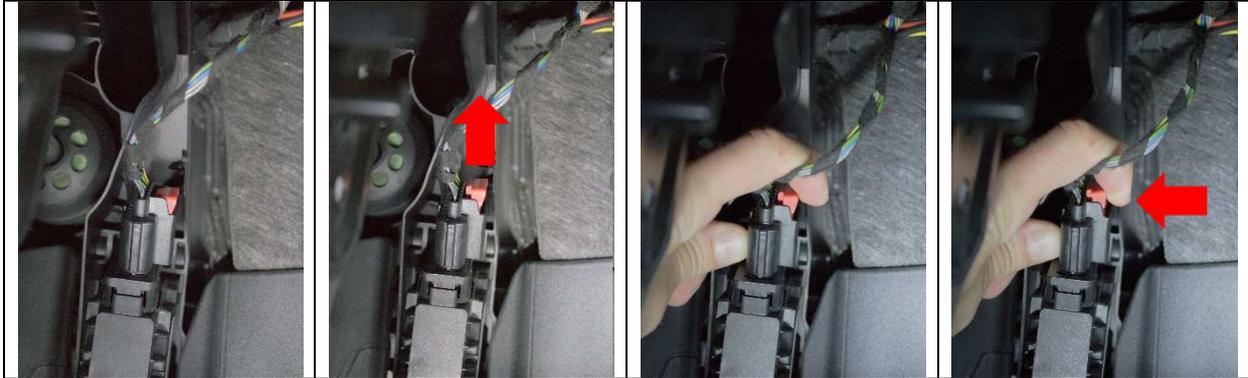

- A. Prepare to unlock the red tab.
- B. Slide the red tab in the direction of the arrow and keep tension on it in order to remove the plug.


2. Step: Install the RESPONDER plug to the gas pedal

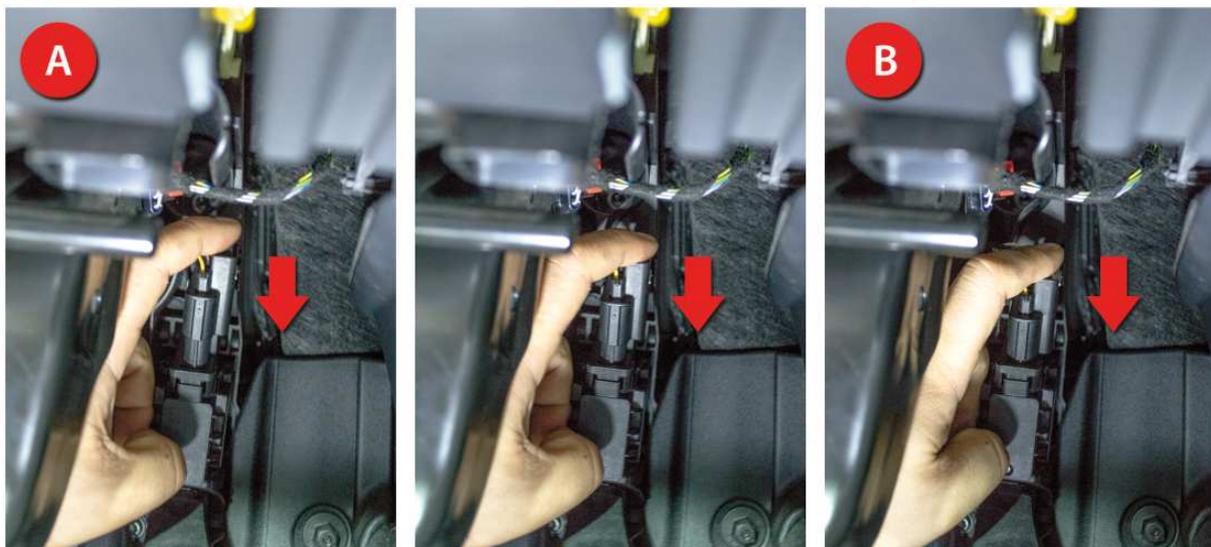

- A. Position the RESPONDER plug onto the gas pedal and push downwards.
- B. A quiet "click" confirms that the plug is correctly in place.




3. Step: Connect the RESPONDER plug to the original loom.

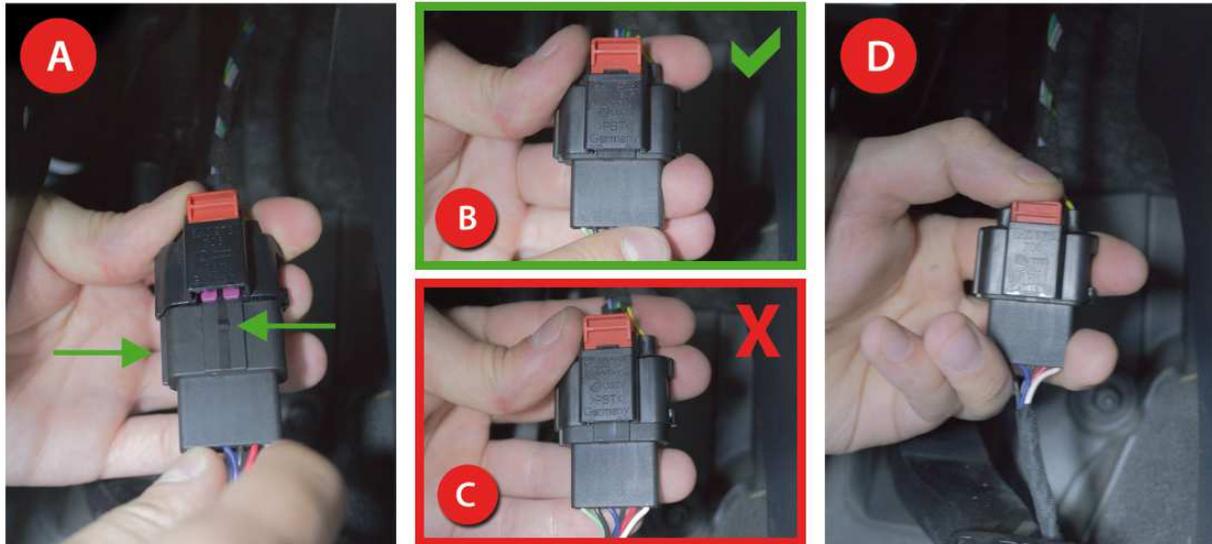

- A. Warning: Position the plug so that the side guide is on the left and the lock tab guide is visible.
- B. Correct! Plug is fully pushed into position.
- C. Wrong! Plug is not fully pushed into position.
- D. Push the red locking tab down to secure, again confirmed by a light „click“.

Removal of RESPONDER at loom

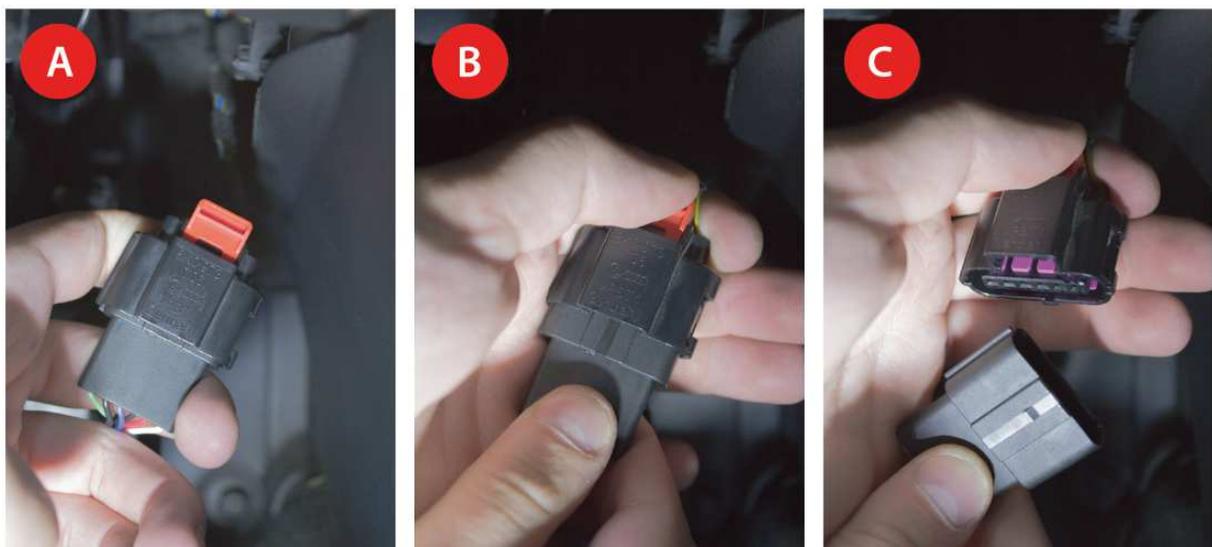


- A. Unlock red tab by sliding upwards.
- B. Keep tension on the red tab.
- C. Gently pull the plugs apart.



REMUS

responder

Removal of RESPONDER at the gas pedal

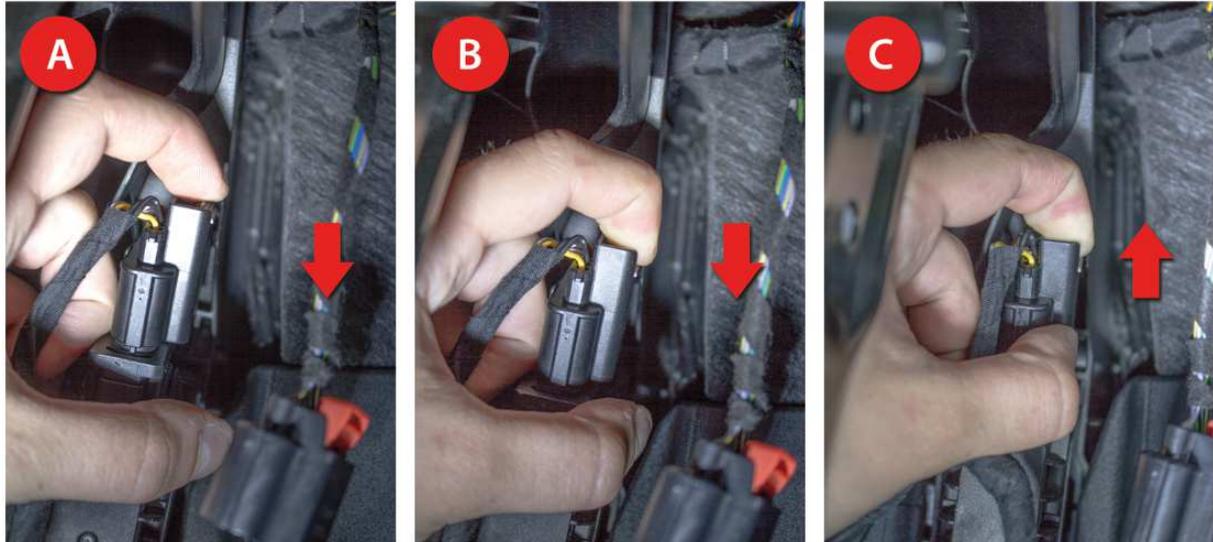

- A. Push the grey locking tab downwards.
- B. Keep pressure on the tab until the plug feels loose.
- C. Gently pull the plug off the gas pedal.